00 00 :000 00 0000 00 + 00 00 0000 00, 1200mAh 000, 00 00

00 00:120ml 0 000 FDA 000 00000.

000 00:

□□□ : 180g, □□□ : 215g

□□ □□: 75 * 65 * 100mm


□□ □□□ :80 * 70 * 105mm

□ □ :535 * 360 * 330mm / 100PS / 22KG



—A sharp tool for sterilization—

Timing injection / Infrared induction / No touch more assured

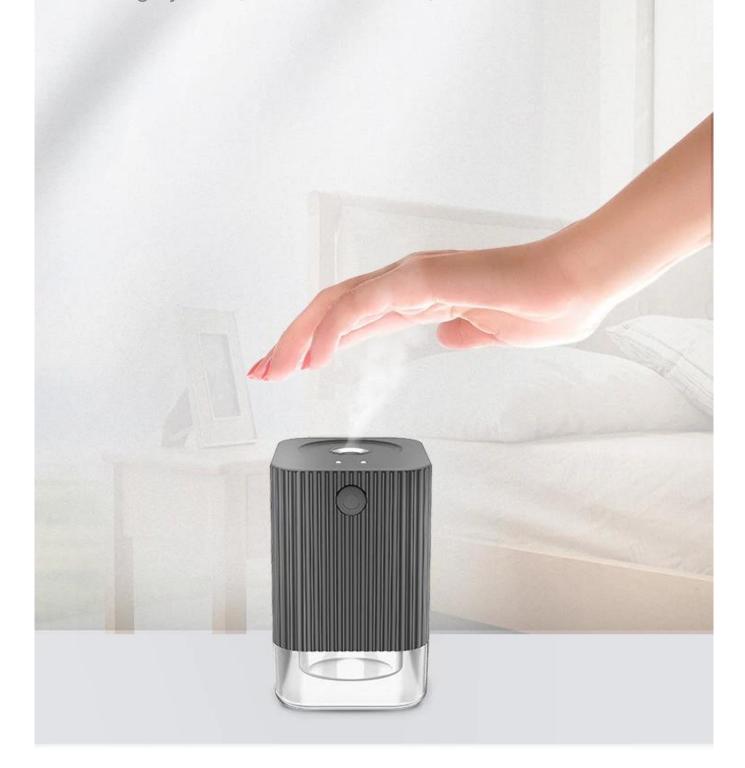



Intelligent chip control induction, rapid response, hand spray.




Intelligent timing injection

One button timing injection of alcohol, more convenient to use.






Timing injection

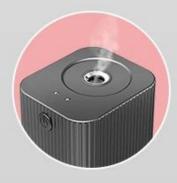


More convenient

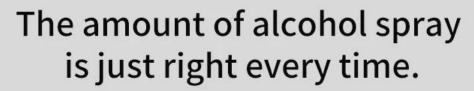

Each spray amount is reasonable and appropriate, energy saving and safety, and alcohol use longer.



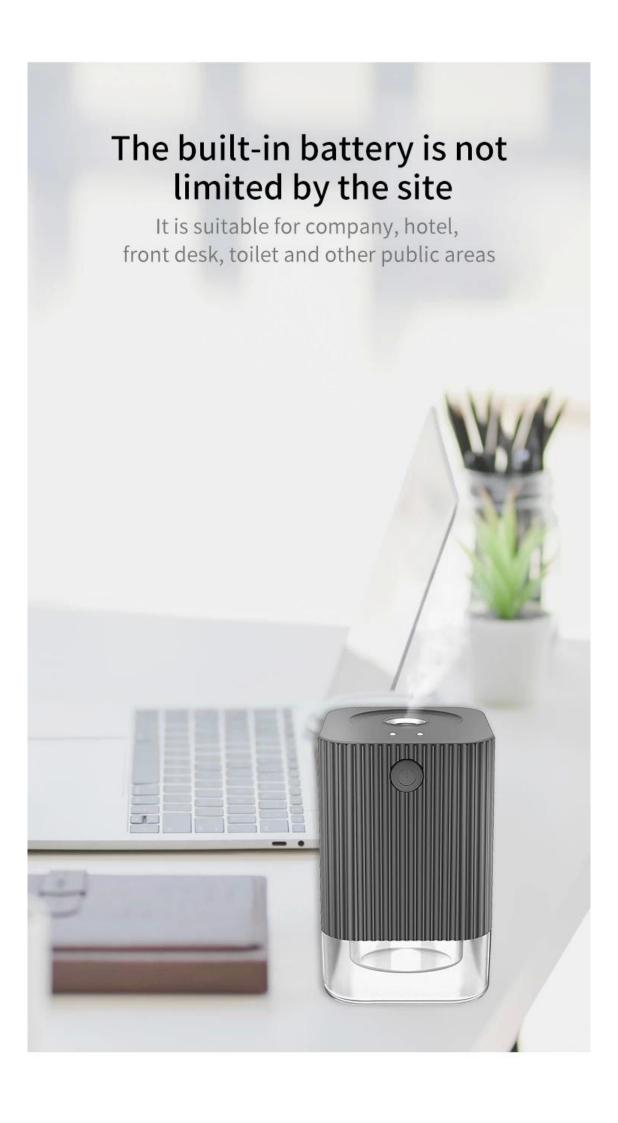















Simple and fashionable design

Clean and tidy simple design style, meticulous workmanship, practical and durable, can With the integration of the overall home environment, make life more intimate and natural.



Hand / article induction spray disinfection

Light and compact, suitable for all kinds of environment



Scene display of alcohol sprayer

Experience disinfection in various scenes










Product details



Double working mode one key switch

- (1) intelligent induction spraying
- (2) automatic continuous spray

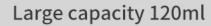





Large battery 1200Ma

Large spray volume

Breathing sleep lamp

Anti rollover and anti leakage liquid

Food grade kettle

• • • • • • • •



Product parameters



Product name

Intelligent sensor sprayer

Battery capacity

frequency

1200MA

110±3Kilohertz

Product size

75MM*65MM*100MM

Product input

DC5V/1A

Product capacity

120ML

Available in black and white

Black and white are available in two different colors



Supporting list

Smart sensor sprayer: 1 miniature USB cables: 1

Instruction manual: 1 absorbent cotton stick: 1





- 1. Take out the equipment and remove the bottom shell.
- Rotate the bottle anticlockwise and take out the bottle and cotton swab. Then pour 75% alcohol or other liquid.
- 3. Put the cotton swab back and tighten the bottle, cover the bottom shell, and wait for 30 seconds.
- 4. Press and hold on / off button to start the machine (blue light is always on), and the product will enter the intelligent sensor spraying mode. Place your hand or object in the infrared sensor hole on the top of the device 0-15 cm, and the device starts spraying the hand or object in a short time.
- 5. In the intelligent sensing mode, press the on / off button (red, blue and yellow lights flash alternately) to switch to continuous spraying mode. Automatic spraying for 15 seconds every 3 minutes. In the continuous spraying mode, press the switch button again (the blue light is on for a long time) to enter the intelligent sensing mode. The working mode can be changed by the on / off button.
- 6. Press and hold the on / off button to close. Continuous spray operation mode is automatic shutdown for more than 6 hours.



[charging operation]

- 1. Connect the micro USB interface of the USB power cable to the micro USB interface of the product.
- Connect the other end of the USB power cable with the 5V / 1A power adapter, and then connect the power adapter and plug it into the power socket.
- 3. When the product starts charging, the red light will flash, and the battery will be full of red light after 3 hours.
- 4. When starting up, if the yellow light of the product is on, it indicates that the battery is too low and needs to be charged.



[note]

- 1. This product does not provide disinfectant, please buy it yourself. 75% alcohol is recommended.
- product is nano micropore spray. Do not pour oily liquid to avoid blockage.
- 3. Do not smoke or ignite near the equipment to avoid fire.
- 4. Prevent children from playing to avoid accidents.



- **1.** [] []
- 1. 00 00 0 00 00 000 00 000 00 PID 000 000000.
- 3. 000 00 0 000 00 000 000000.

- 4. 000 000 00000 000 000 000 00 0 0000.
- **2.** 00 000 00
- 1. [][] [][], T / T [] PayPal[] [][][][].
- $3. \ \, \Box\Box\ \, \Box\Box\Box\ \, \Box\Box\Box\Box.\ \, \Box\Box\ \, \Box\ \, \Box\ \, \Box\ \, \Box\ \, \Box$
- **3.** 00 0 00

00 00 : 00000 **1-3** 00 0 **5-7** 0 00 000 00 000 00

□□ □□ □ □□□□□ □ OEM □ 7-10 □

4. 00 0 000

1. 00 : 00 0000 12 00

3. 000 000 00 000 00 00.

 $A: \Box\Box \ \Box\Box\Box \ \Box\Box\Box\Box\Box, \ \Box\Box\Box \ \Box\Box\Box\Box\Box\Box$

Q: 000 00000?

 $\mathsf{A}: \Box\Box\Box\ \Box\Box\Box\Box\Box\Box\ \Box\ \Box\Box\ \Box\Box\Box\Box\Box\Box\Box$

Q: 000 00 00 000 00000?

Q:00000000000000000?