Products Description

2020 New design mini touch-less Auto alcohol spray dispenser infrared Sensor touch free hand sanitizer humidifier

Special feature:

Dual working modes:intelligent sensor spray mode + automatic continuous spray mode,1200 mAh battery, sleep light

Liquid Gel Type:Innovative design of alcohol spray type, rinse-free and convenient.

Simple Operation: Easy and convenient to pour the alcohol and water inside through the bottle mouth.

Capacity:The 120ml water tank is with FDA certificate.

Automatic & Touch Free: infrared Sensor touch free **sanitiser dispenser spray alcohol supplier**, safe and health for it keeps down the spread of germs.

Wide Application[Suitable for daily use and professional use, perfect for home, HOTEL, villa, APARTMENT, OFFICE BUILDING, HOSPITAL, school, mall, Sports venues, Leisure Facilities, supermarket, WAREHOUSE, WORKSHOP, Park, farmhouse, Courtyard or other public places.

Note: for thin liquid like alcohol ,water etc.

Package List:

Net weight: 180g, package:215g

Product Size:75*65*100mm

Product Package Size:80*70*105mm

Carton Size:535*360*330mm/100PS/22KG


Accessories:Host*1, charging cable*1, cotton swab*1, user manual*1


More related products: **China smart sprayer manufacturer**



—A sharp tool for sterilization—

Timing injection / Infrared induction / No touch more assured

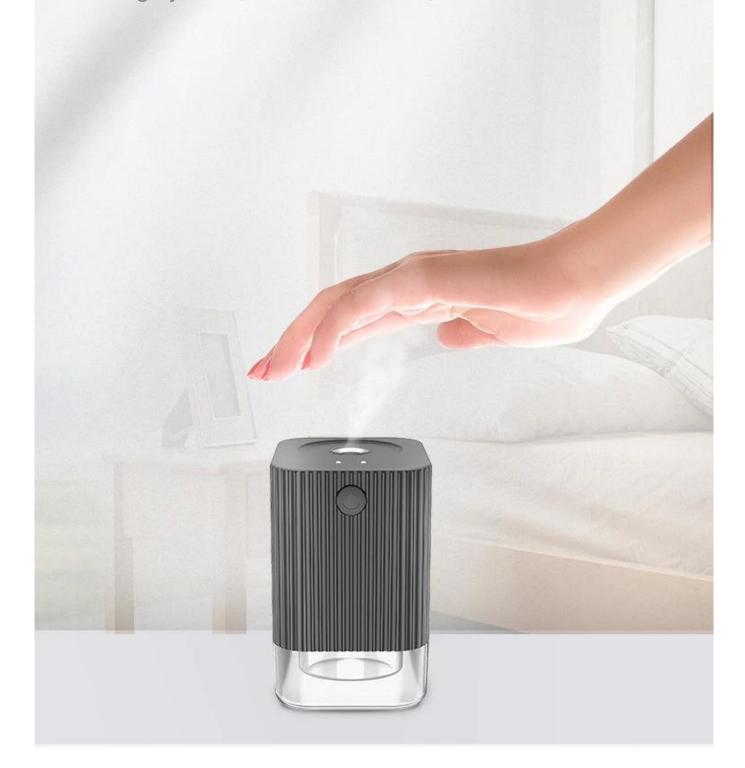



Intelligent chip control induction, rapid response, hand spray.




Intelligent timing injection

One button timing injection of alcohol, more convenient to use.






Timing injection

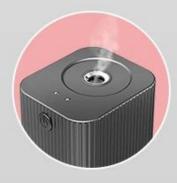


More convenient



Each spray amount is reasonable and appropriate, energy saving and safety, and alcohol use longer.



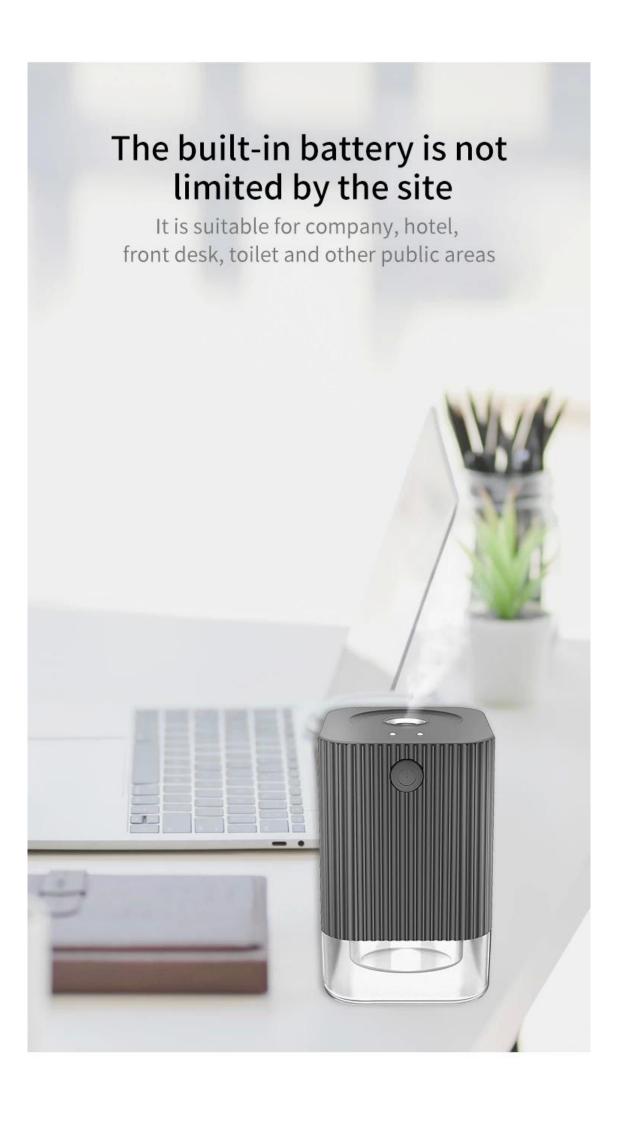












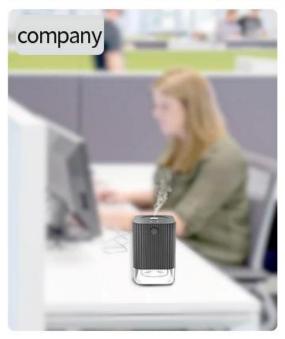



Simple and fashionable design

Clean and tidy simple design style, meticulous workmanship, practical and durable, can With the integration of the overall home environment, make life more intimate and natural.



Hand / article induction spray disinfection

Light and compact, suitable for all kinds of environment



Scene display of alcohol sprayer

Experience disinfection in various scenes










Product details



Double working mode one key switch

- (1) intelligent induction spraying
- (2) automatic continuous spray







Large battery 1200Ma

Large spray volume

Breathing sleep lamp

Anti rollover and anti leakage liquid

Food grade kettle

• • • • • • • •



Product parameters



Product name

Intelligent sensor sprayer

Battery capacity

frequency

1200MA

110±3Kilohertz

Product size

75MM*65MM*100MM

Product input

DC5V/1A

Product capacity

120ML

Available in black and white

Black and white are available in two different colors



Supporting list

Smart sensor sprayer: 1 miniature USB cables: 1

Instruction manual: 1 absorbent cotton stick: 1



infrared Sensor touch free hand sanitizer humidifier manufacturer, launches 2020 new design mini touch-less Auto alcohol spray dispenser intelligent sensor spray mode + automatic continuous spray mode



📰 [instructions][instructions]

- Take out the equipment and remove the bottom shell.
- 2. Rotate the bottle anticlockwise and take out the bottle and cotton swab. Then pour 75% alcohol or other liquid.
- 3. Put the cotton swab back and tighten the bottle, cover the bottom shell, and wait for 30 seconds.
- 4. Press and hold on / off button to start the machine (blue light is always on), and the product will enter the intelligent sensor spraying mode. Place your hand or object in the infrared sensor hole on the top of the device 0-15 cm, and the device starts spraying the hand or object in a short time.
- 5. In the intelligent sensing mode, press the on / off button (red, blue and yellow lights flash alternately) to switch to continuous spraying mode. Automatic spraying for 15 seconds every 3 minutes. In the continuous spraying mode, press the switch button again (the blue light is on for a long time) to enter the intelligent sensing mode. The working mode can be changed by the on / off button.
- 6. Press and hold the on / off button to close. Continuous spray operation mode is automatic shutdown for more than 6 hours.



[charging operation]

- Connect the micro USB interface of the USB power cable to the micro USB interface of the product.
- 2. Connect the other end of the USB power cable with the 5V / 1A power adapter, and then connect the power adapter and plug it into the power socket.
- 3. When the product starts charging, the red light will flash, and the battery will be full of red light after 3 hours.
- 4. When starting up, if the yellow light of the product is on, it indicates that the battery is too low and needs to be charged.



[note]

- 1. This product does not provide disinfectant, please buy it yourself. 75% alcohol is recommended.
- product is nano micropore spray. Do not pour oily liquid to avoid blockage.
- 3. Do not smoke or ignite near the equipment to avoid fire.
- 4. Prevent children from playing to avoid accidents.

About order

1. how to order

- 1. Tell us the production model and quantity or other request you need, then we'll make the PI for you.
- 2. After you confirm the PI, we'll arrange the order for you after receiving your payment.
- 3. After finish the goods, we'll send you the goods and a tracking number.
- 4. We will track your goods until you receive them.

2. available payment

- 1.Western Union, T/T and PayPal are accepted.
- 2. 30% deposit and 70% before shipping.
- 3. No payment collection. Only deliver goods after full payment

3. packaging & delivery

Packaging: white box/plastic tube/foam tray/custom made

Shipping: TNT/FedEx/DHL/UPS/EMS, most economical price and fast react.

Lead time: 1-3 working days for sample

5-7 working days for bulk orderaccording various quantities

7-10 working days for OEMafter receiving your sample confirmation and payment

4. after-sales service

- 1.Warranty:12 months from shipment date
- 2. Anything damaged, please provide pictures or video for confirmation. Send back the defective goods within warranty, we will repair them or send replacement pieces.
- 3. Tracking the goods until you get them.

FAQ

Q: How can I get the **smart sprayer** samples to check your quality?

A: Sample order is available, can be shipped by Express, you'll receive it in 3-7 days.

Q: What can I get the price?

A: We usually quote within 24 hours after we get your inquiry. If you are very urgent to get the price, please tell us in your email so that we will regard your inquiry as priority.

Q:What is your trade term of delivery?

A: We accept EXW, FOB Shenzhen or CIF destination port. You can choose the one which is the most convenient or cost effective for you.

Q: What about the lead time for the mass production?

A: Honestly, it depends on the order quantity and the season you place the order. Sample order is within 2 days. OEM/OEM order will need extra time.